


LEV-C904

Installation Instructions

Enclosed:


1 off Assembled Lever

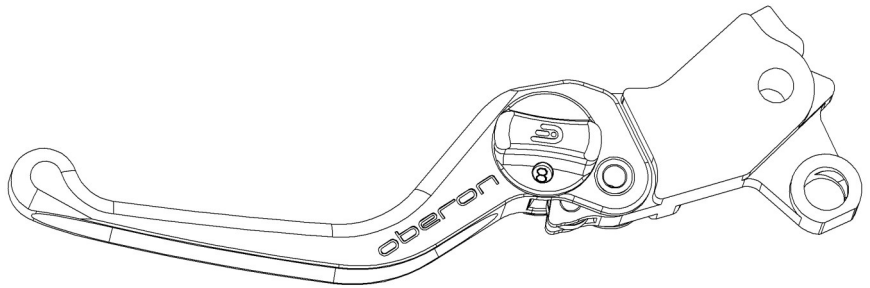

1. Remove OEM pivot pin and nut.



2. Carefully remove the original lever from the master cylinder.
3. Remove the OEM brass barrel and transfer to the new clutch lever.
4. Place the replacement lever in the master cylinder making sure the OEM plunger engages correctly with the brass barrel.

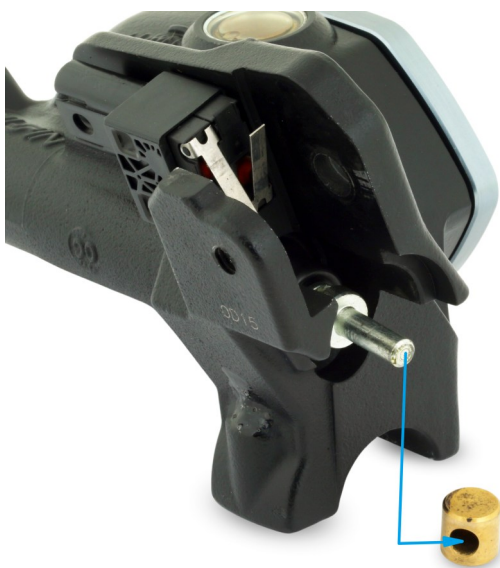

5. Apply a small amount of grease and replace the pivot pin and nut. Tighten to manufactures recommended settings.



6. Work the lever back and forth a few times to make sure it is seated correctly and not binding anywhere. Turn the handlebars fully from lock to lock and check for any interference. Correct as necessary.

For your safety we highly recommend fitting is performed by a qualified person. Improper installation, repair or lack of maintenance can be extremely dangerous.



Oberon Performance Limited, Havant Business Centre, Harts Farm Way, Havant, Hampshire, PO9 1HU

admin@oberon-performance.co.uk

Tel: uk +44 023 9248 1188