




# Adaptor 14, 18 & 22 Instructions

SKU: MIS-0014, MIS-0018, MIS-0022

**Preparation:**

Before installing your new purchase please read and understand these instructions fully and make sure you have the required tools at hand.

1. Remove the original bar end and any fittings from the handlebar.
2. Check that the internal bore is clear of obstructions and burrs. Measure the internal bore and note down the size. Select the largest collet/adaptor that will fit into the hole with out forcing it in.
3. If one of the aluminium adaptors is a closer fit, slide this over the 14mm brass collet with the open end of the machined slots facing outwards.
4. Skip this section if the internal bore of the handlebars is above 13.5mm. For bars with an internal bore smaller than the collet (down to 12mm). Push the mirror bar end into the bar using the hex drive key in the bolt. If the collet does not collapse readily then loosen the bolt further and persuade the bolt by tapping against the hex key with a soft mallet. The brass collet should collapse fairly easily and slide into the handlebar. Lightly tighten the bolt so that the bar end can still rotate with some form of resistance.
5. For 18mm or 22mm replace the complete collet. Push the mirror bar end into the handlebar using the 5mm hex drive key. Tighten the M6 bolt inside the bar end as tight as you can. Be careful on thin walled handlebar's not to expand the handlebar diameter to interfere with throttle rotation.
6. We suggest you apply a very small amount of thread locker to all fasteners. **DO NOT** use red Loctite. Periodically recheck all fastenings for tightness.

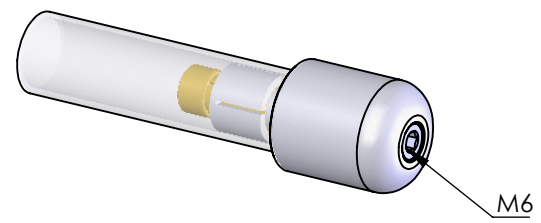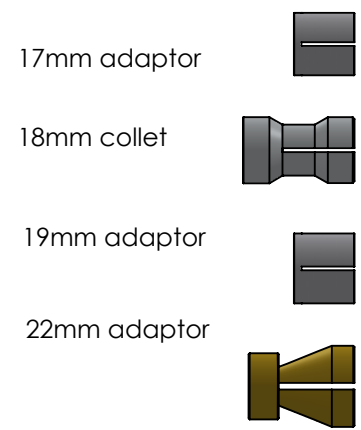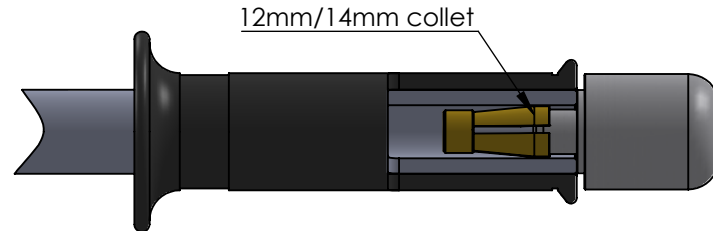

14  
18  
22

**PROPRIETARY AND CONFIDENTIAL**  
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF OBERON PERFORMANCE LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF OBERON PERFORMANCE LTD IS PROHIBITED.

DO NOT SCALE DRAWING		REVISION:
TITLE: <b>Streetfighter Mirror Matching BarEnd</b>		
DWG NO: <b>Installation Instructions</b>		<b>A4</b>
SCALE:		

# Adaptor 26 & 28 Instructions

SKU: MIS-0026, MIS-0028


## Preparation:

Before installing your new purchase please read and understand these instructions fully and make sure you have the required tools at hand.

1. Remove the original bar end and any fittings from the handlebar.
3. Place the mirror bar end onto the end of the handlebar and tighten the M6 or M8 bolt, depending on your adaptor kit.
4. We suggest you apply a very small amount of thread locker to all fasteners. DO NOT use red Loctite. Periodically recheck all fastenings for tightness.

26

28

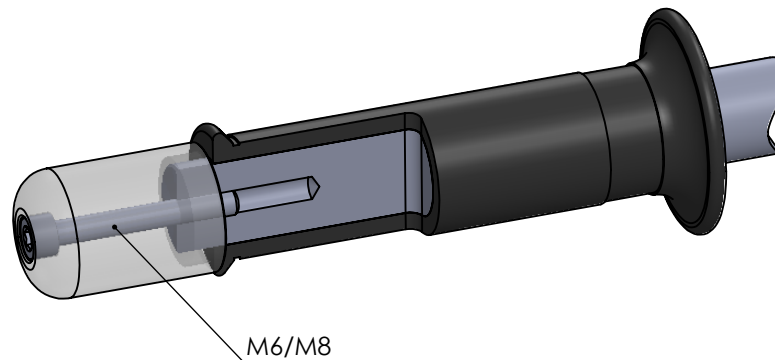

**PROPRIETARY AND CONFIDENTIAL**  
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF OBERON PERFORMANCE LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF OBERON PERFORMANCE LTD IS PROHIBITED.

DO NOT SCALE DRAWING		REVISION:
TITLE: Streetfighter Mirror Matching BarEnd		
DWG NO: Installation Instructions		A4
SCALE:		

# Adaptor 06 & 08 Instructions

SKU: MIS-0006, MIS-0008


### Preparation:

Before installing your new purchase please read and understand these instructions fully and make sure you have the required tools at hand.

1. Remove the original bar end and any fittings from the handlebar.
3. Place the mirror bar end onto the end of the handlebar and tighten the M6 or M8 bolt, depending on your adaptor kit.
4. We suggest you apply a very small amount of thread locker to all fasteners. DO NOT use red Loctite. Periodically recheck all fastenings for tightness.

06

08

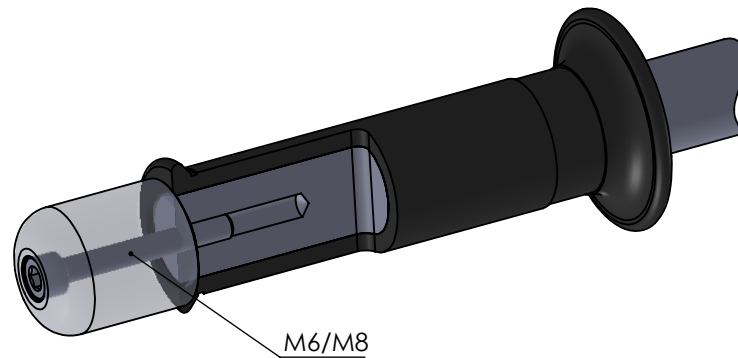

M6/M8

**PROPRIETARY AND CONFIDENTIAL**

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF OBERON PERFORMANCE LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF OBERON PERFORMANCE LTD IS PROHIBITED.

DO NOT SCALE DRAWING

REVISION:



TITLE:  
**Streetfighter Mirror Matching BarEnd**

DWG NO:  
**Installation Instructions**

A4

SCALE:

# Adaptor 60 Instructions


SKU: MIS-0060

## Preparation:

Before installing your new purchase please read and understand these instructions fully and make sure you have the required tools at hand.

1. Remove the original bar end and any fittings from the handlebar.
2. Apply thread locker to M12 adaptor and drive home using a 6mm hex drive. Leave to cure. Red Loctite is recommended.
3. Place the mirror bar end onto the end of the handlebar and tighten the M6 bolt.
4. We suggest you apply a very small amount of thread locker to all fasteners. DO NOT use red Loctite. Periodically recheck all fastenings for tightness.

60

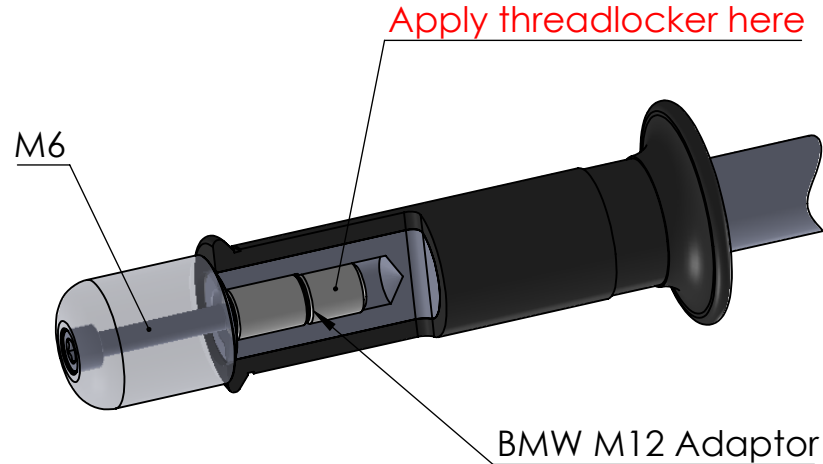

### PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF OBERON PERFORMANCE LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF OBERON PERFORMANCE LTD IS PROHIBITED.

DO NOT SCALE DRAWING

REVISION:



TITLE:  
**Streetfighter Mirror Matching BarEnd**

DWG NO:  
**Installation Instructions**

A4

SCALE:



# Adaptor 16 Instructions

SKU: MIS-0016

**Preparation:**

Before installing your new purchase please read and understand these instructions fully and make sure you have the required tools at hand.

1. Remove the original bar end and any fittings from the handlebar.
2. Check that the internal bore is clear of obstructions and burrs. Select the largest collet/adaptor that will fit into the hole with out forcing it in.
3. If one of the aluminium adaptors is a closer fit, slide this over the 14mm brass collet with the open end of the machined slots facing outwards.
5. Push the mirror bar end into the handlebar using the 5mm hex drive key, tighten the bolt.
11. We suggest you apply a very small amount of thread locker to all fasteners. DO NOT use red Loctite. Periodically recheck all fastenings for tightness.

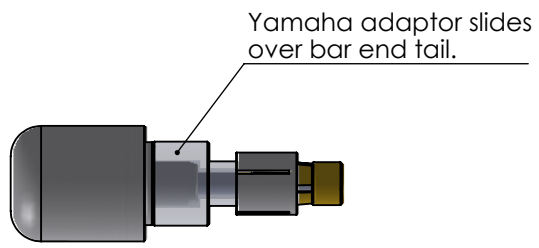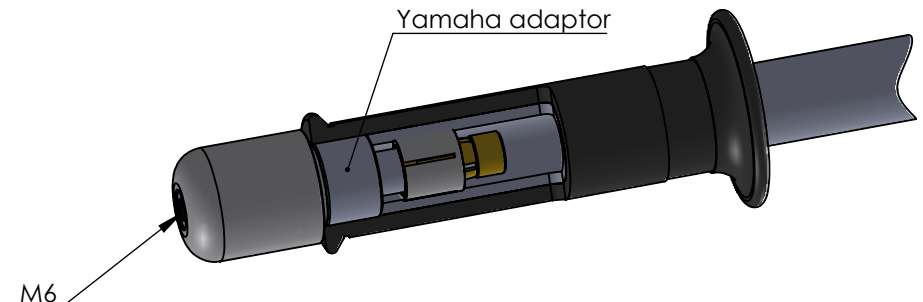

**16**

DO NOT SCALE DRAWING		REVISION:
		
TITLE: <b>Streetfighter Mirror Matching BarEnd</b>		
DWG NO: <b>Installation Instructions</b>		<b>A4</b>
SCALE:		

**PROPRIETARY AND CONFIDENTIAL**

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF OBERON PERFORMANCE LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF OBERON PERFORMANCE LTD IS PROHIBITED.