
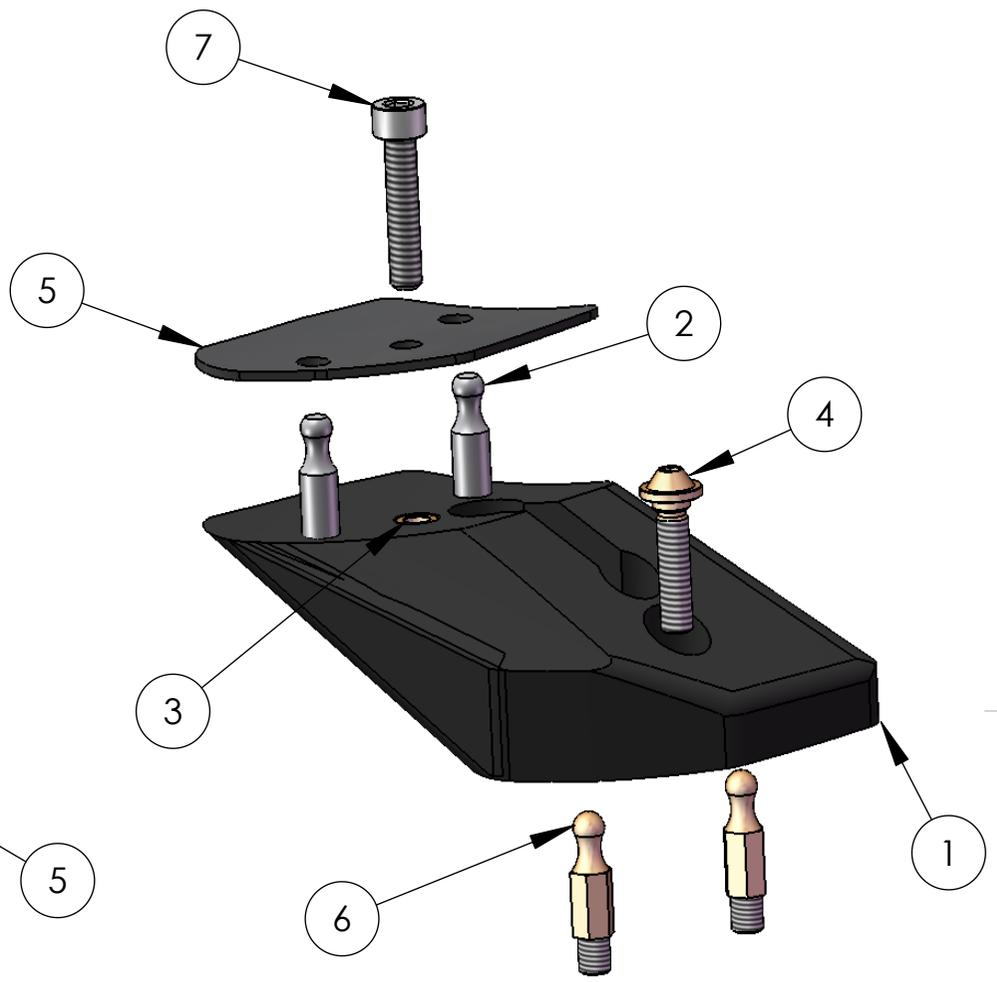


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	52601-16 Left / 52602-16 Right	Plastic Extender Block	1
2	52604-00	1098/1198 Mirror Pin	2
3	M5 Brass Insert		1
4	M5 OEM Pin	OEM Brass Shear Pin	1
5	Gasket	OEM Rubber Gasket	1
6	Brass pin	OEM Pins on mirror	2
7	M5 Cap Head 25mm		1

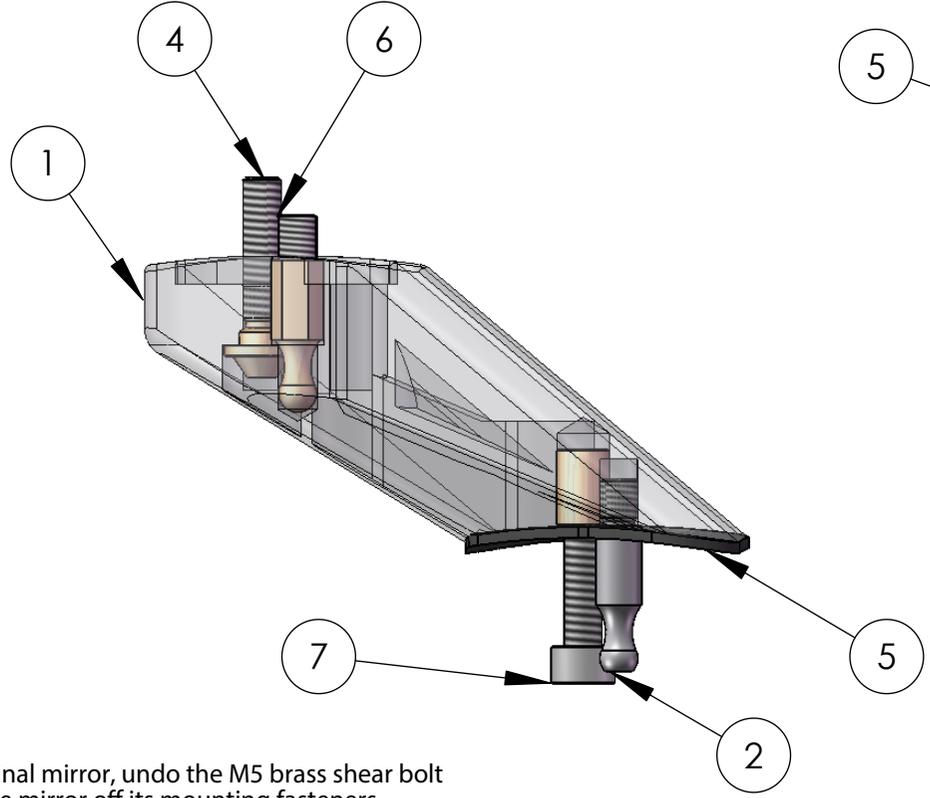

- (1) To remove original mirror, undo the M5 brass shear bolt and gently twist the mirror off its mounting fasteners. Disconnect the mirror from the wiring loom via the connector block.
- (2) Tease out enough wiring slack from behind the fairing to allow the connector to reach the hole in the fairing.
- (3) Bolt the mirror to the extender using the original M5 shear bolt. Do not over tighten. Make sure to thread the wire down the channel in the extender block.
- (4) Re connect the wiring loom making sure that both gaskets are in their correct position.
- (5) Push mirror back into place making sure the connector is not squashed or trapped.
- (6) Secure the assembly with the M5 x 25mm stainless steel bolt. Do not over tighten.

UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS SURFACE FINISH: TOLERANCES: LINEAR: ANGULAR:			FINISH:	DEBUR AND BREAK SHARP EDGES
NAME	SIGNATURE	DATE		
DRAWN				
CHK'D				
APPV'D				
MFG				
Q.A			MATERIAL:	
			WEIGHT:	

DO NOT SCALE DRAWING	REVISION
	
<h1>MIX-0704</h1>	
DWG NO. 1098/1198 Mirror Extender Instructions	A4
SCALE:1:2	SHEET 1 OF 1