

Installation Instructions

Preload Adjusters




PRE-0001, PRE-0002, PRE-0003, PRE-0006,
PRE-0007, PRE-0008, PRE-0009, PRE-0010

Enclosed:

2 off preload adjusters

6 off M4 x 6mm set screws

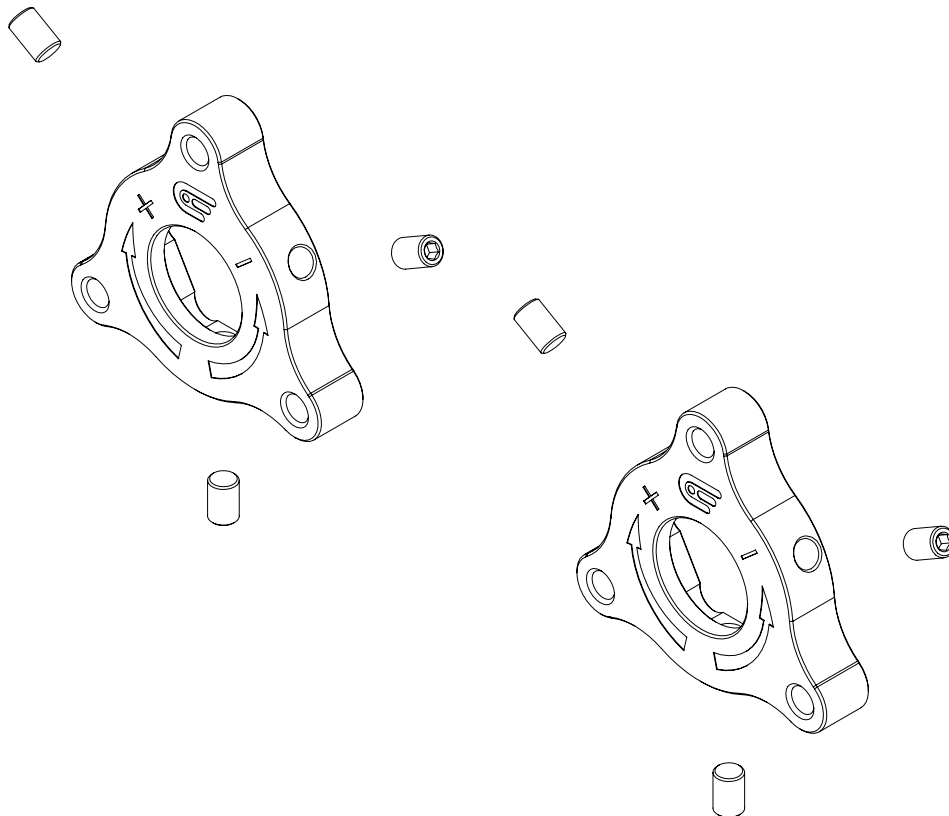

1. Lightly oil/grease the 3 grub screws, slightly thread into the adjuster, making sure they do not protrude into the machined pocket.
2. Place the pre-load adjuster onto the top of your forks. (if you find they are a tight fit, use a soft faced mallet to gently tap them home.)
3. Pressing down firmly, tighten the grubs screws.

Turn handlebars from lock to lock checking for any interference
FAILURE TO CHECK COULD RESULT IN INJURY!